
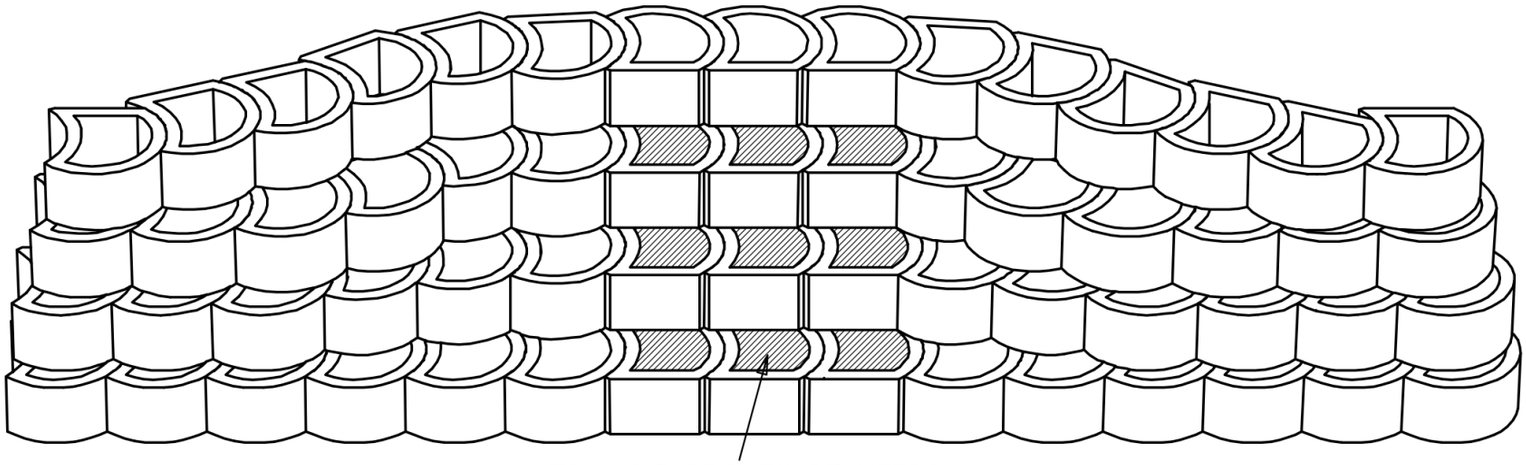


TO AVOID GROWTH OF WEEDS,
TREADS MAY BE PROVIDED
WITH CONCRETE SCREED


STEP DETAIL 1

USE THIS DETAIL TO DIVERT STORMWATER DOWN A TERRAFORCE WALL

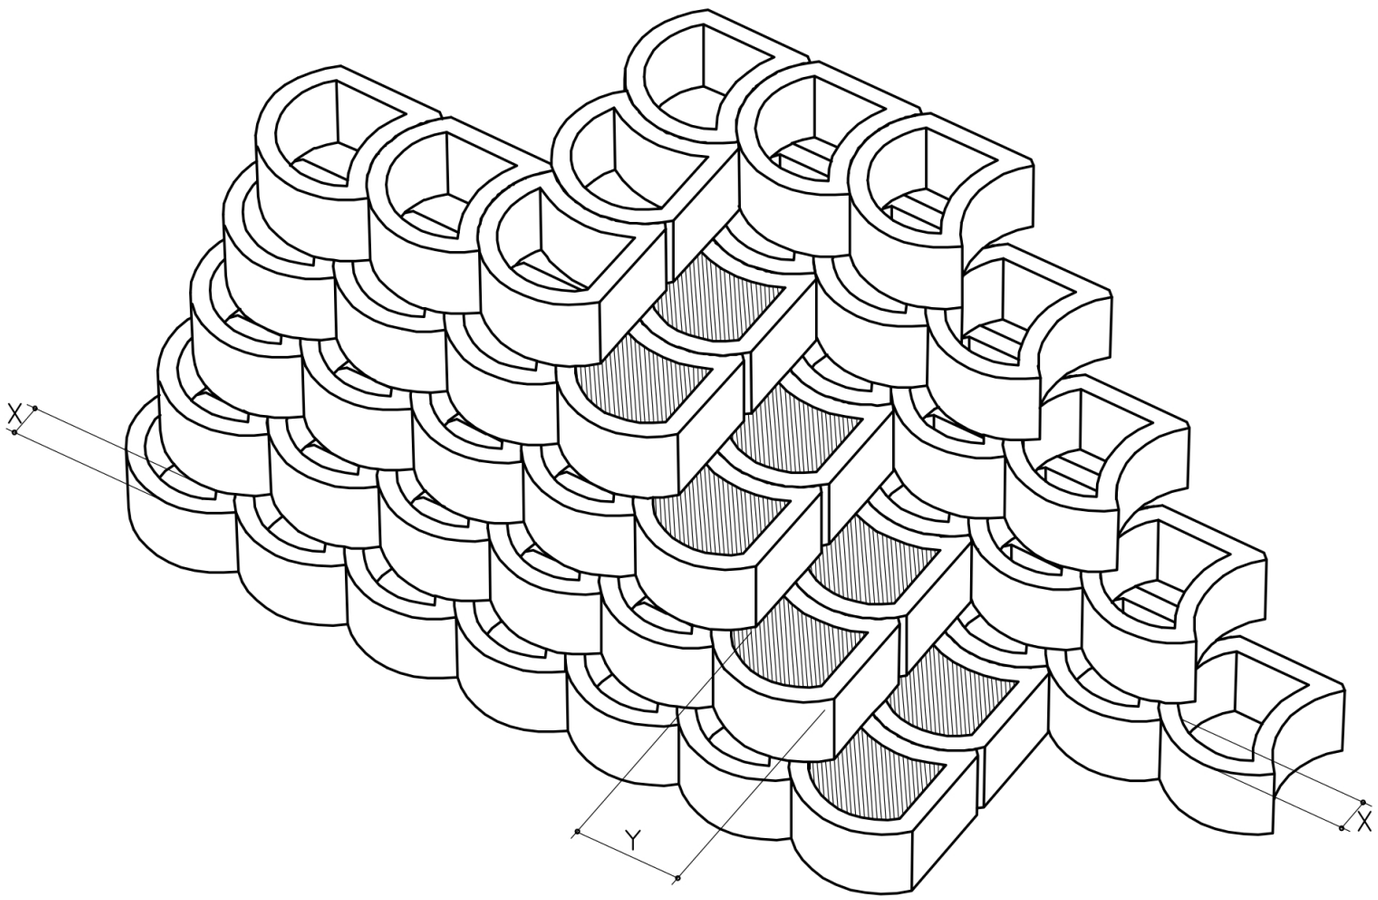


STEP DETAIL 2

ALT. BUTTRESS

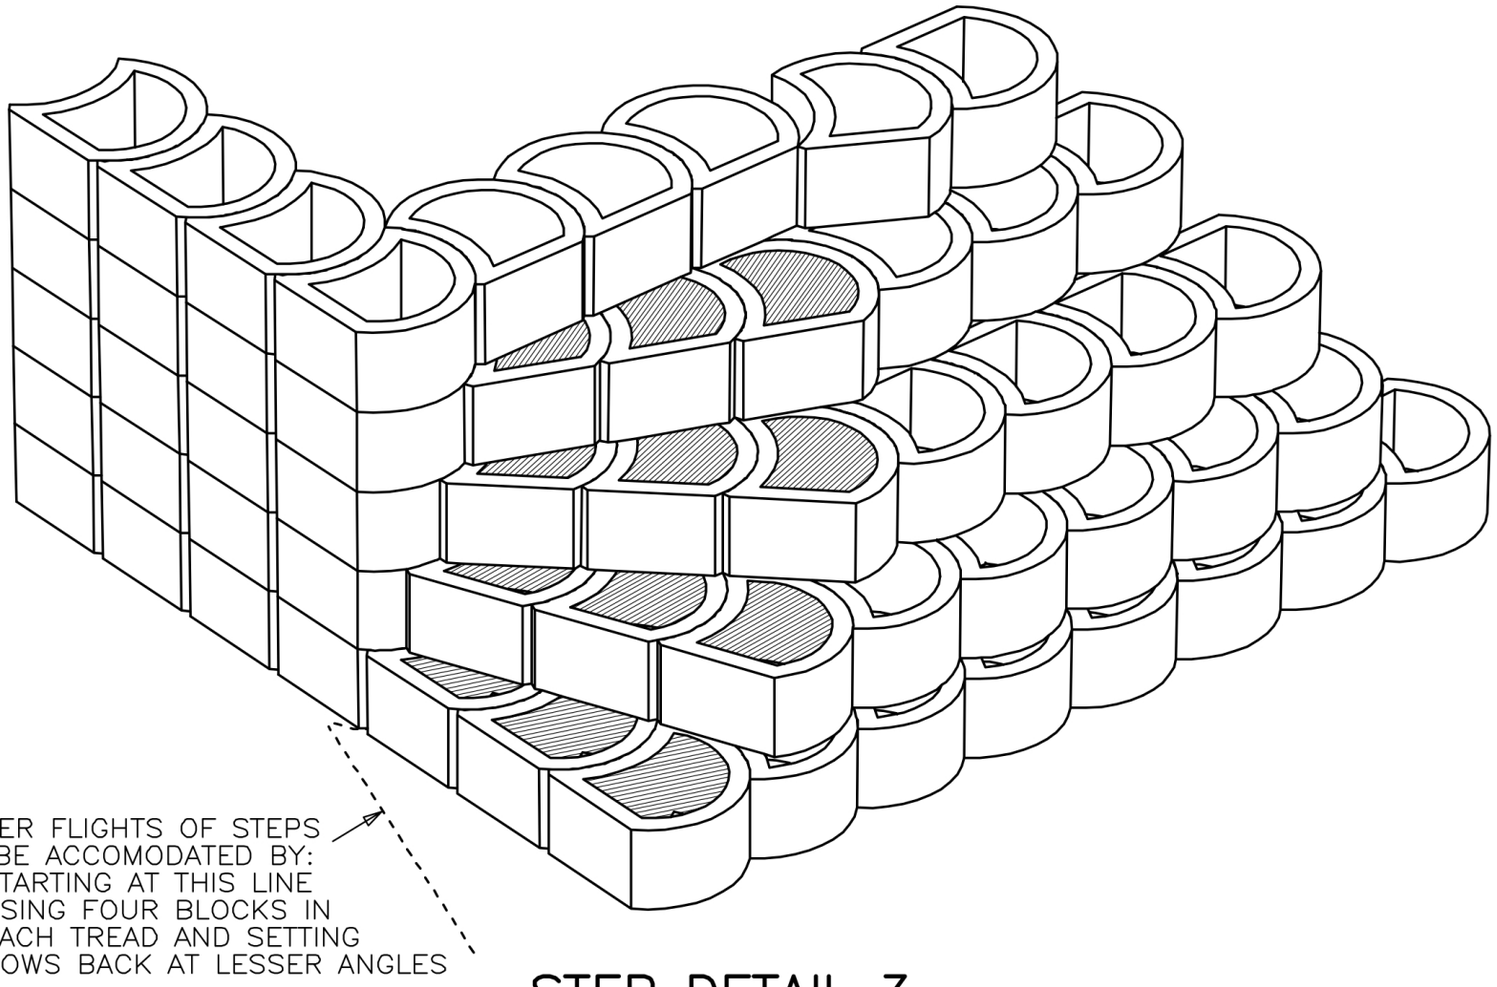

STEP DETAIL 3

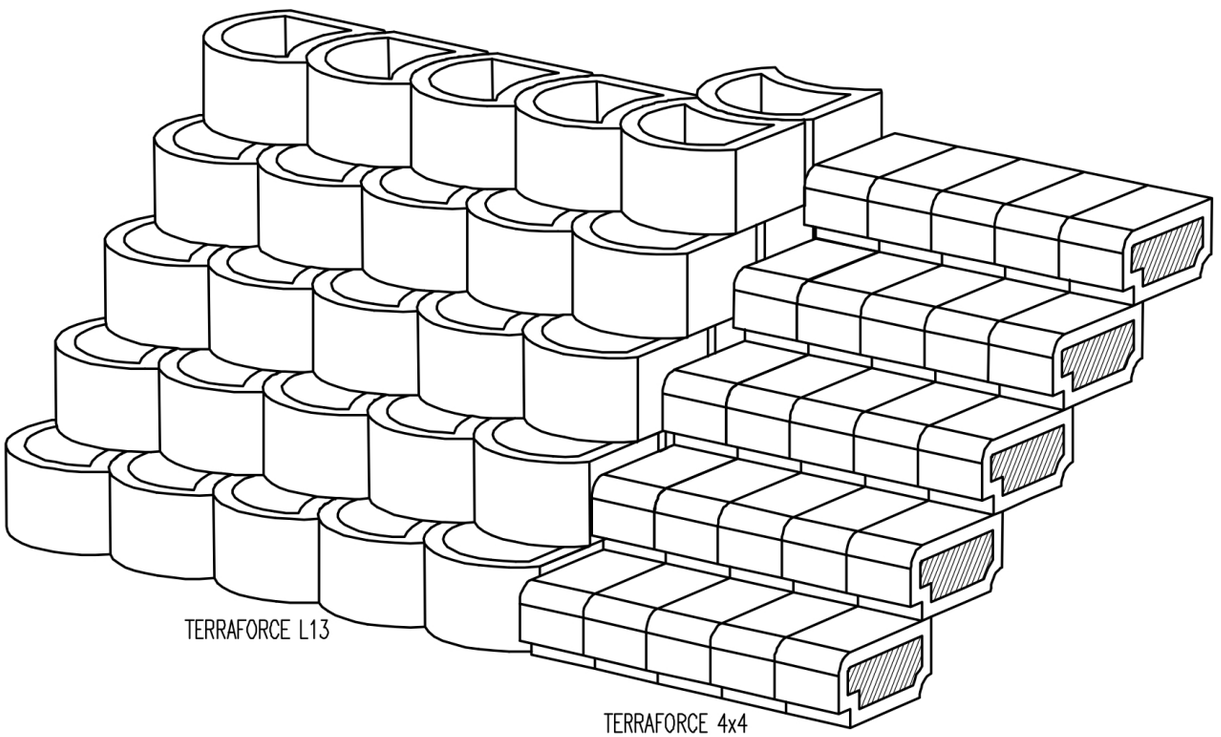

STEP DETAIL 4